

## **TRACKER Monitor Remote Control Programming Instructions**

### **1 Using an existing Remote Control**

- Disarm the alarm by pressing the button on the remote control. (siren beeps once)
- Within five seconds press the button once again (siren beeps twice)
- Within five seconds press the button once again (siren beeps once)
- Within five seconds press the button once again (siren beeps twice)
- Within five seconds press the button once again (siren beeps once)
- Within five seconds press the button once again (siren beeps twice)
- Within five seconds press the button once again (siren beeps once)
- On the seventh press of the remote control the siren will beep **THREE** times
- Within five seconds press the button on the **NEW** remote control three times
- On the third press the siren will beep twice and the alarm is armed)
- To disarm the alarm presses the button on either remote control once more. (Siren beeps once)

### **2 When all remote controls are lost**

- Gain access to the alarm control unit and remove the blanking grommet in the lid.
- Press the silver button on the PCB three times within five seconds (siren beeps three times.)
- Press the button on the remote control three times.
- On the last press of the remote control button the siren will beep twice and the alarm will be armed.
- To disarm press the button on the remote control once more. (Siren beeps once)

**Up to five remotes controls can be programmed onto each alarm**